

## Warranty

Whilst every Lucent product is manufactured to the highest quality standards, we offer a comprehensive Warranty for complete peace of mind.

### Residential Use

15 Years	Replacement Product or Parts
10 Years	Surface Finish
1 Year	Labour

### Commercial Use

5 Years	Replacement Product or Parts
1 Year	Labour & Surface Finish

Warranty may become void due to any of the following:

- Inability to provide proof of purchase or equivalent documentation
- Product not installed by a licensed Plumber
- Failure to install product to national standards and state regulations
- Failure to install product in accordance with manufacturers installation instructions
- Pressure and Temperature Requirements:

- Hydro Static inlet pressure range: 150 to 500kPa
- Maximum hot water temperature 75 degree celsius
- Recommended operating temperatures: 1 to 75 degrees celsius

- Fitting of non-approved flow controllers in tap bodies or outlets
- If products are used for outdoor applications.
- Product used for non-potable water applications.
- Damage because of insufficient flushing of lines prior to installation. Service, repairs, or installation of non-Lucent replacement parts undertaken without Lucent's prior written approval.
- Damage to finishes caused by non adherence to cleaning instructions.

## Cleaning Instructions:



CLEAN MICROFIBRE  
CLOTH



SOAPY WATER



PH BALANCE  
SOAP - BASED  
CLEANSER

### WARRANTY SERVICE

For all warranty service calls, please contact your local store.

Phone: 1300 474 714


E-mail: [warranty@lucentdesigns.com.au](mailto:warranty@lucentdesigns.com.au)



INS\_1003.pdf rev.1.0

# LUCENT<sup>®</sup>

## Installation and Operating Instructions

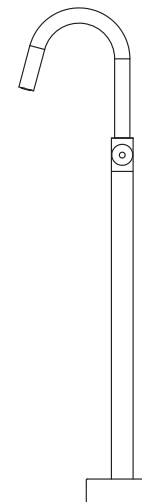

### FLOOR MOUNTED BATH MIXER 11013 | 12013 | 14013 | 16013 | 18013



Thank you for purchasing a quality Lucent product. Please note that this product must be installed by a qualified and registered plumber who is compliant with all the relevant regional requirements and who holds current certification.

Note: Please read all instructions prior to installation to limit warranty disputes should a claim arise.

## Water Supply Requirements



recommended  
working pressure  
**350KPa**



maximum hot  
water temperature  
**75 degrees**

### Pressure

- Maximum Hydrostatic Pressure: 1000kPa
- This pressure may be exceeded only under test conditions as per AS/NZS3500,
- Recommended Minimum Hydrostatic Pressure: 150 kPa

### Temperature



- Water Temperature Range: 1°C to 75°C

## Installation Instructions

Note to Plumber: Please provide this leaflet to the owner after installation.

### STEP 1

Ensure correct orientation as shown by the coloured indicators. Fix the base to the floor using appropriate hardware (concrete anchors provided). Ensure the spirit level is centred.

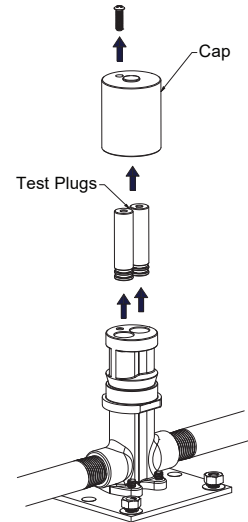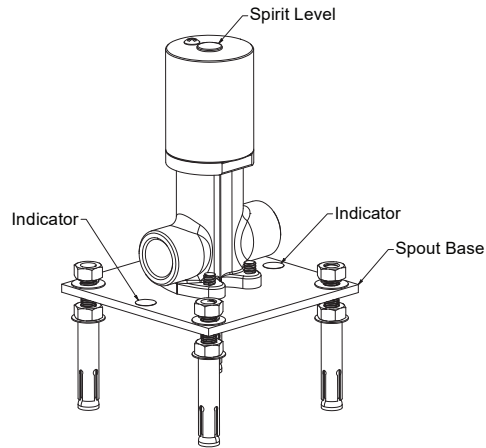


### STEP 3

Remove the cap and test plugs.



### STEP 2

Connect the Hot and Cold Inlets. Pressure test before proceeding.

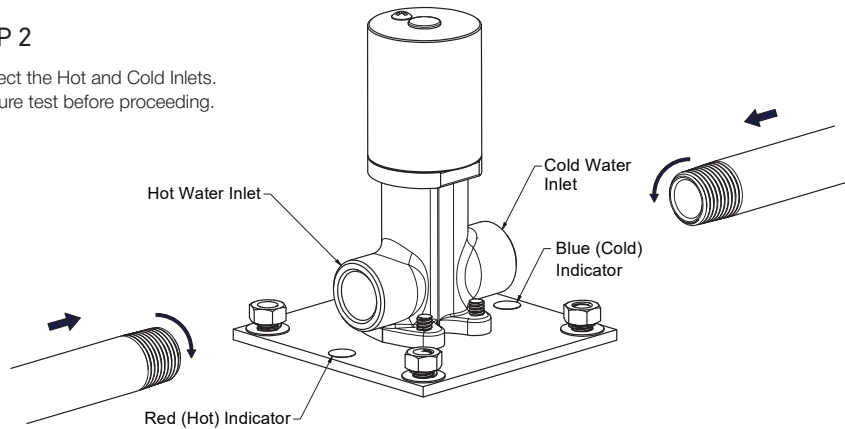

### STEP 4

Slide the Spout through the Cover Plate. Fit the spout assembly to the base by pushing the Mixer Tails into the base outlets until fully seated. Secure by tightening the four screws ensuring the spout is vertical.

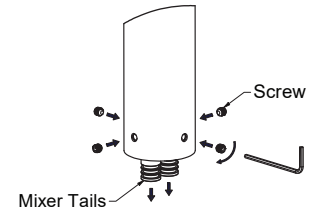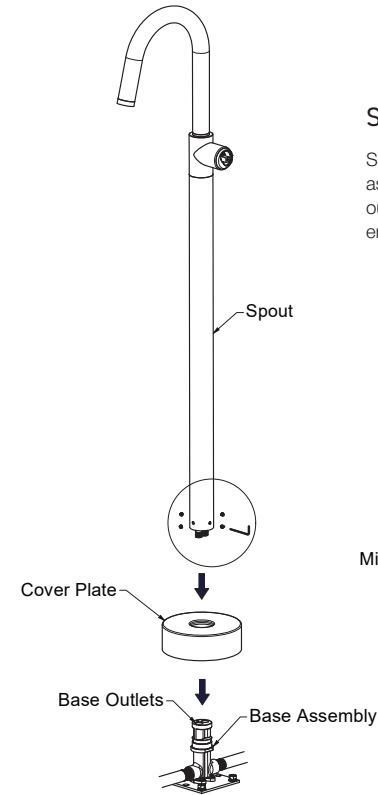

### STEP 5

Ensuring correct alignment, install handle onto the mixer and secure using the provided hex key.

