

LUCENT[®]

Installation and Operating Instructions


Warranty

Whilst every Lucent product is manufactured to the highest quality standards, we offer a comprehensive Warranty for complete peace of mind.

| Residential Use | | Commercial Use | |
|-----------------|-------------------------------|----------------|-------------------------------|
| 20 Years | Replacement Cartridge | 15 Years | Replacement Cartridge |
| 10 Years | Replacement products or parts | 7 Years | Replacement products or parts |
| 2 Year | Labour | 1 Year | Labour |

Warranty may become void due to any of the following:

- Inability to provide proof of purchase or equivalent documentation
- Product not installed by a licensed Plumber
- Failure to install product to national standards and state regulations
- Failure to install product in accordance with manufacturers installation instructions
- Pressure and Temperature Requirements:
 - Static inlet pressure range: 150 to 500kPa
 - Maximum hot water temperature: 75 degree celsius
 - Recommended operation temperatures: 1 – 75 degrees celsius
- Fitting of non-approved flow controllers in tap bodies or outlets
- If products are used for outdoor applications.
- Product used for non-potable water applications.
- Damage because of insufficient flushing of lines prior to installation. Service, repairs, or installation of non-Lucent replacement parts undertaken without Lucent's prior written approval.
- Damage to finishes caused by non adherence to cleaning instructions.

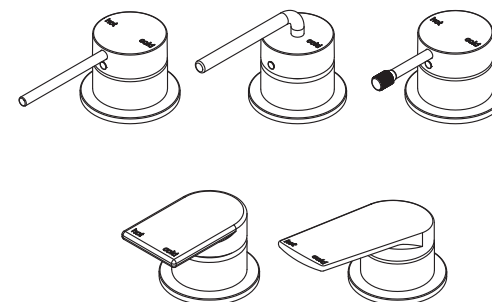

Cleaning Instructions:



CLEAN MICROFIBRE
CLOTH



SOAPY WATER



PH BALANCE
SOAP - BASED
CLEANSER

Warranty Service

For all warranty service calls please contact your local store.
Phone: 1300 474 714
E-mail: warranty@lucentdesigns.com.au



INS_1037.pdf rev.1.0

SHOWER/PROGRESSIVE WALL MIXER WITH DIVERTER

11014 | 12014 | 14014 | 16014 | 18014



Thank you for purchasing a quality Lucent product. Please note that this product must be installed by a qualified and registered plumber who is compliant with all the relevant regional requirements and who holds current certification.

Note: Please read all instructions prior to installation to limit warranty disputes should a claim

Water Supply Requirements



recommended
working pressure
350KPa



maximum hot
water temperature
75 degrees

Pressure

- Recommended Minimum Hydrostatic Pressure: 150 to 500 kPa
- This pressure may be exceeded only under test conditions.
- Where hydrostatic pressure exceeds 500kPa, pressure limiting valve must be installed as per AS/NZS 3500

Temperature


- Water Temperature Range: 1°C to 75°C

Suitable Hot water Units

- Storage Tank: Yes
- Continuous Flow: Yes


Installation Instructions

Note to Plumber: Please provide this leaflet to the owner after installation.

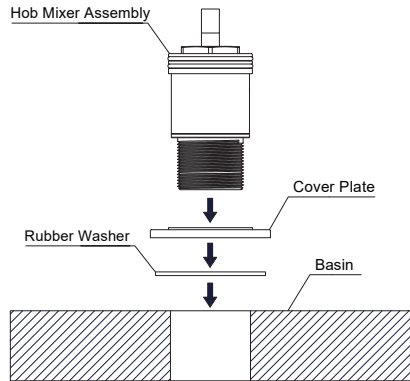


STEP 1

Ensure the rubber washer and cover plate are installed. Insert the hob mixer into the basin, sing, or benchtop.

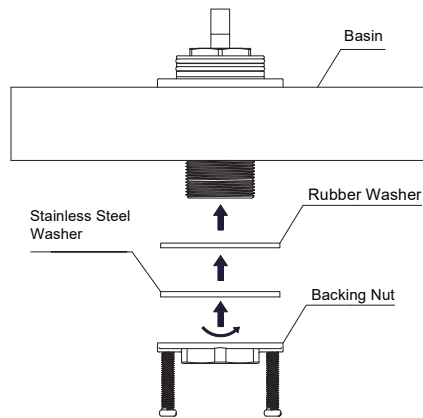


STEP 2

Ensure the stainless steel and rubber washers are in place. Tighten the backing nut until the mixer is firmly mounted. Note: Additional washers are included for use with thinner basins.

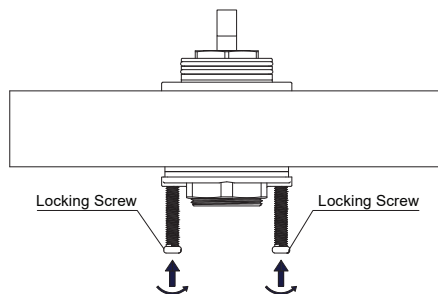

STEP 3

Firmly tighten the locking screws

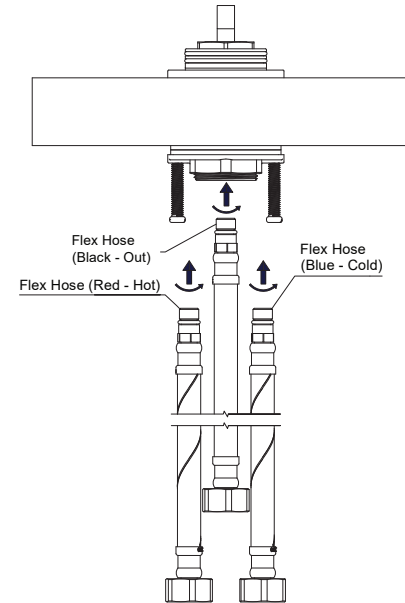


STEP 4

Screw the provided flexible houses into the mixer connections.
Note: Mixer connections are labeled C (Cold), H (Hot) and O (Out)

STEP 5

Install the dome cover.
Ensure the recess is facing away from the front of the basin.

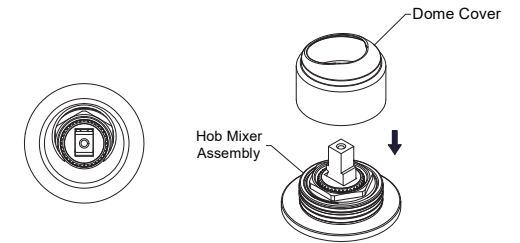

STEP 6

With the mixer in open position, install the handle and secure the screw using the provided hex key.

Insert the cap into the screw hole.

Note: Handle styles may vary.

